

FC-42/FC-52MA INSTRUCTIONS

Changing master/engineer code number

Press master programme number 11 (factory set)
Press key A
Red light will flash
Press 00A
Red light on permanently
Put in new master/engineers code
Press A
Red light will flash
Press 55A
Light will go out.

Programming door entry codes

Enter master code and A
Red light will flash
Enter 01 and A
Red light on permanently
Enter door entry code (1-8 digits)
Press A
If required put in second code + A.
When finished keep pressing A until light flashes.
Press 55A
Light will go out.

NOTE: Keep a record of the codes used and what order they have been programmed in. You will need this information when you come to void a code.

Activation time of relay.

Enter master code + A
Light will flash
Enter 03A
Red light on permanently
Enter time (in seconds). If under 10 seconds use 0 first. i.e.: 5 seconds = 05
Press A
Keep pressing A until light flashes.
Press 55A
Light will go off

EMERGENCY RESET

Take power off keypad. Switch on again holding key B until you hear a confirmation